

VENUCAST™

FreeMic W / Duo

Wireless Headset
(& Handheld) Microphone Kit



Interactive User Guide

Version 2.3



First Time Setup



Troubleshooting

< Back



Main Menu

1. Before You Start
2. Check Compatibility
3. Connect to Transmitter
4. Other Connections
 - Connect to Speaker
 - Connect to Mixer
5. Use the Microphone
6. Power & Charging
7. Troubleshooting
8. Register & Support

Next



1. Before You Start

Wireless mic for AUX audio systems

Best for:

- Teaching / presentations
- Meetings / small events
- Use with Venucast transmitters

Check compatibility before use.

Next



2. Check Compatibility

Find the right audio input on your device.

 Works best




3.5mm

- AUX IN

 Also works



6.35 mm

-  IN or MIC IN with a volume knob
- LINE/MIC Combo (Mixer)

 Not Supported

- LINE IN (Mixer)
- MIC IN without a volume knob

Next



< Back



Menu

Choose your device

Select the device you'll use with the wireless mic kit.



Transmitter
(Recommended)



Speaker



Mixer



3. Connect to Transmitter

Recommended: [Oasis Aura](#)



Get full volume & stable sound:

- Use included 3.5mm cable
- Keep the receiver and transmitter apart



What to expect:



With Headphones:

- Clear sound
- Low latency



With Speakers:

→ [Normal slight delay](#)

→ [Feedback noise?](#)

Next




4. Other Connections

4.1 Connect to Speaker

★ Works best: AUX IN 3.5mm

Get full volume & best sound: Use the included **3.5mm stereo to mono cable**

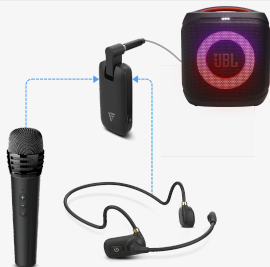

✓ Also works:

👉 IN or MIC IN with a volume knob

Use the included 6.35mm adapter



Next



4.2 Connect to Mixer

✓ Works with

- MIC IN
- LINE/MIC Combo

Use the included 6.35mm adapter



Next





5. Use the Microphone

Simple controls for everyday use.

- **Power & Connect**

On both mic & receiver, hold Power to turn on

→ Auto-connect (LEDs turn **solid**)

- **Volume**

Press + / - on mic or receiver

- **Range**




Up to 20 m (65 ft)

Next





6. Power & Charging

- Use the **USB-C** cable (5V, 1-2.4A).
- **Charging:** LED stays **red**
- **Fully charged:** LED turns **off** (~3h)
- **Playtime:**
 -  48h
 -  11.5h
 -  11.5h

Next



< Back



Menu

Rate This Guide

Your feedback helps us improve this guide for everyone.

It only takes a moment.



Next



7. Troubleshooting

- **Delay** Hear your own voice with **a slight delay?**

- This is **normal** with Auracast systems
- Place the speaker further away from you

- **Feedback** High-pitched noise?

- Lower the volume
- Keep the mic \geq **5 m** from the speaker

- **Audio cuts out?**

- Keep mic closer to the receiver
- Keep some distance between the transmitter and receiver



Still need help? [Contact support](#) ↗

Next



< Back



Menu

8. Register & Support

Agent Support

Need help? We're here.



Email



Call



Chat

Register Your Product

Extended warranty & get updates.

[Get 36M Warranty](#)

