AuraLink

Bluetooth Auracast Audio Receiver



Interactive User Guide

Version 2.5

Start Setup

Firmware Update

< Back



Main Menu

1. Before You Start

2. Power & Charge

3. Auracast Mode

- Join an Open Broadcast
  (Android Phones/Avantree Transmitters)
- Join a Secured Broadcast

4. Bluetooth Mode

5. Firmware Update

6. Troubleshooting

7. Register & Support

Rate This Guide

Next

< Back

Menu

1. Before You Start

AuraLink is an audio receiver. It allows you to:

- Turn your wired speakers into wireless ones.
- Receive Auracast™ broadcasts.
- Receive audio via Bluetooth.

Next

< Back

Menu

2. Power & Charge

- Use USB-C (5V, 1~2.4A).
- Low battery: LED blinks red
- Charging: LED stays solid red
- Fully charged: LED turns off (~2 hrs)
- Playtime: Up to 20 hrs
- Can be used while charging

Note:

- AuraLink auto turns off after 30 mins with no audio playback (even if a broadcast is joined)

Update firmware to Keep it ON when plugged in ↗

Next

< Back

Menu

3. Auracast Mode

Choose how you want to join:

A

Join an Open Broadcast

→ Auto-search and connect directly
(No code or app needed)

B

Join a Secured Broadcast

→ Connect via Android Auracast Assistant
(For encrypted broadcasts that require authentication)

< Back

Menu

A.1 Join an Open Broadcast

AuraLink can **automatically join public** Auracast broadcasts.

❶ Slide power switch to "**ON**"
→ LED blinks orange
→ **auto-searches** for broadcasts.

❷ **Connected:** LED turns solid **orange**.

Supported Auracast Broadcasting Devices:

👉 Auracast-enabled Android phones ↗

👉 Avantree Auracast transmitters ↗

👉Check more ↗

Next

< Back

Menu

Turn on Auracast on Phone

❶ Open **Bluetooth Settings** on Phone

❷ Select “**Broadcast sound using Auracast**”

⚠ Auracast menu locations vary by phone model.

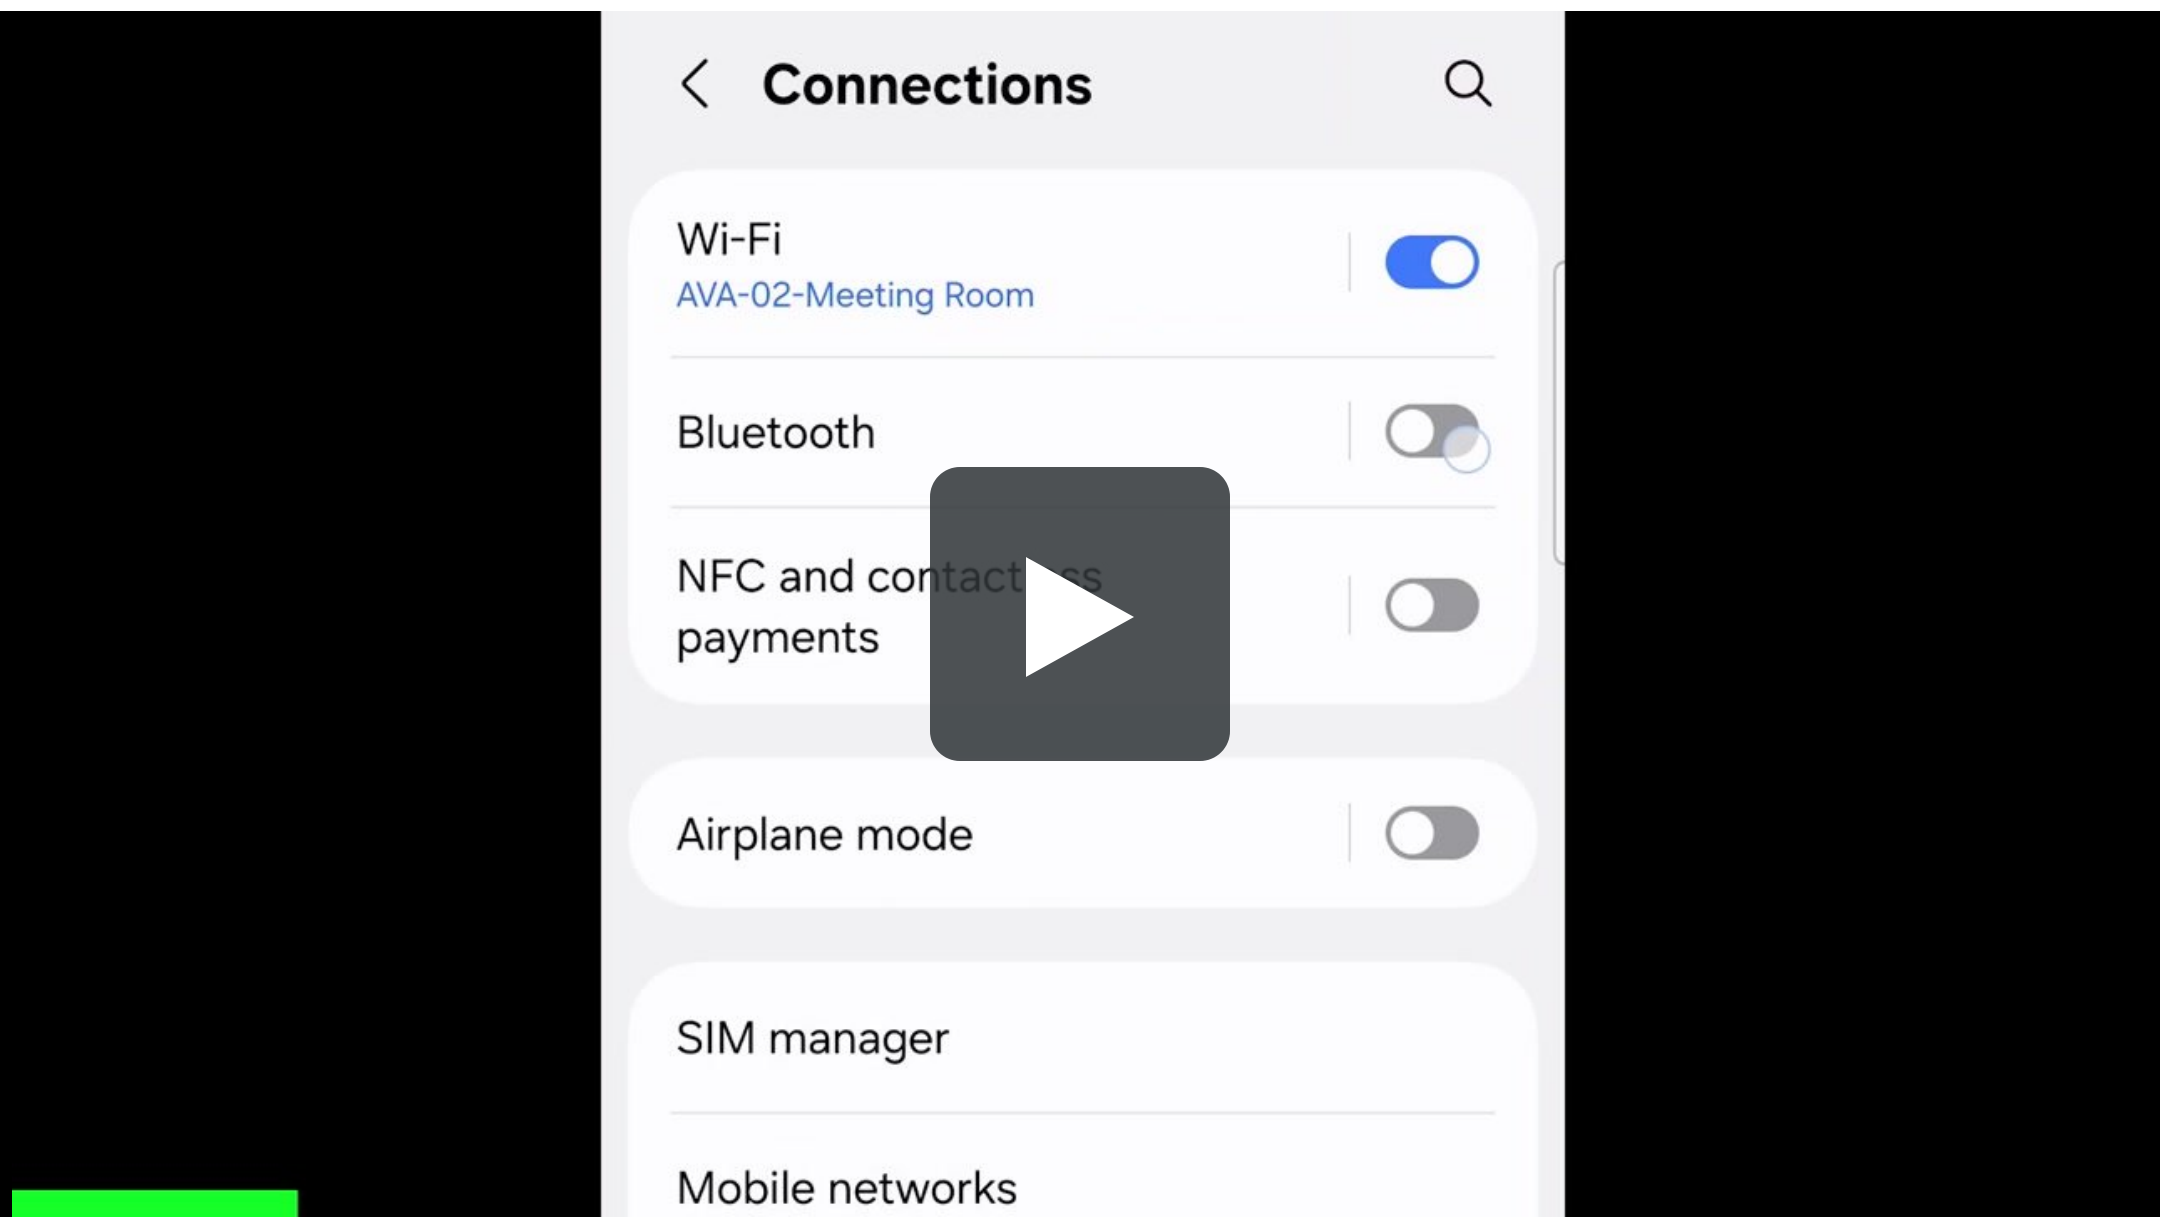

Common supported models:

- Google Pixel 8 /9 series
- Samsung Galaxy S23 / S24 series

☞ **Auracast-enable Phone Checker** ↗

Next

< Back

Menu

Turn on Auracast on Avantree Transmitter

❶ Power on transmitter.

❷ Put it into Auracast mode.

⚠ Please refer to the transmitter’s user guide for model-specific instructions.

Supported Avantree Auracast Transmitters:



Oasis Aura



Audikast



Voyager



C82 Aura

Next

< Back

Menu

A.2 Plug in Speaker

❶ Plug AuraLink into your speaker.

❷ Play audio

❸ **Adjust volume** through:

- Audio source (TV / phone / PC)
- Transmitter (e.g. Audikast 4)
- The speaker’s own volume control

👉 Join a Secured Broadcast ↗

Next

< Back

Menu

B.1 Join a Secured Broadcast

👉 Find a phone with Auracast Assistant support. (e.g. Samsung S23+, Pixel 8/9)

❶ Pair AuraLink with phone via bluetooth.

❷ Turn on LE Audio on Phone
→ tap **Listen to Auracast broadcast**
→ **Choose** broadcast want to join.

❸ Enter the broadcast source password

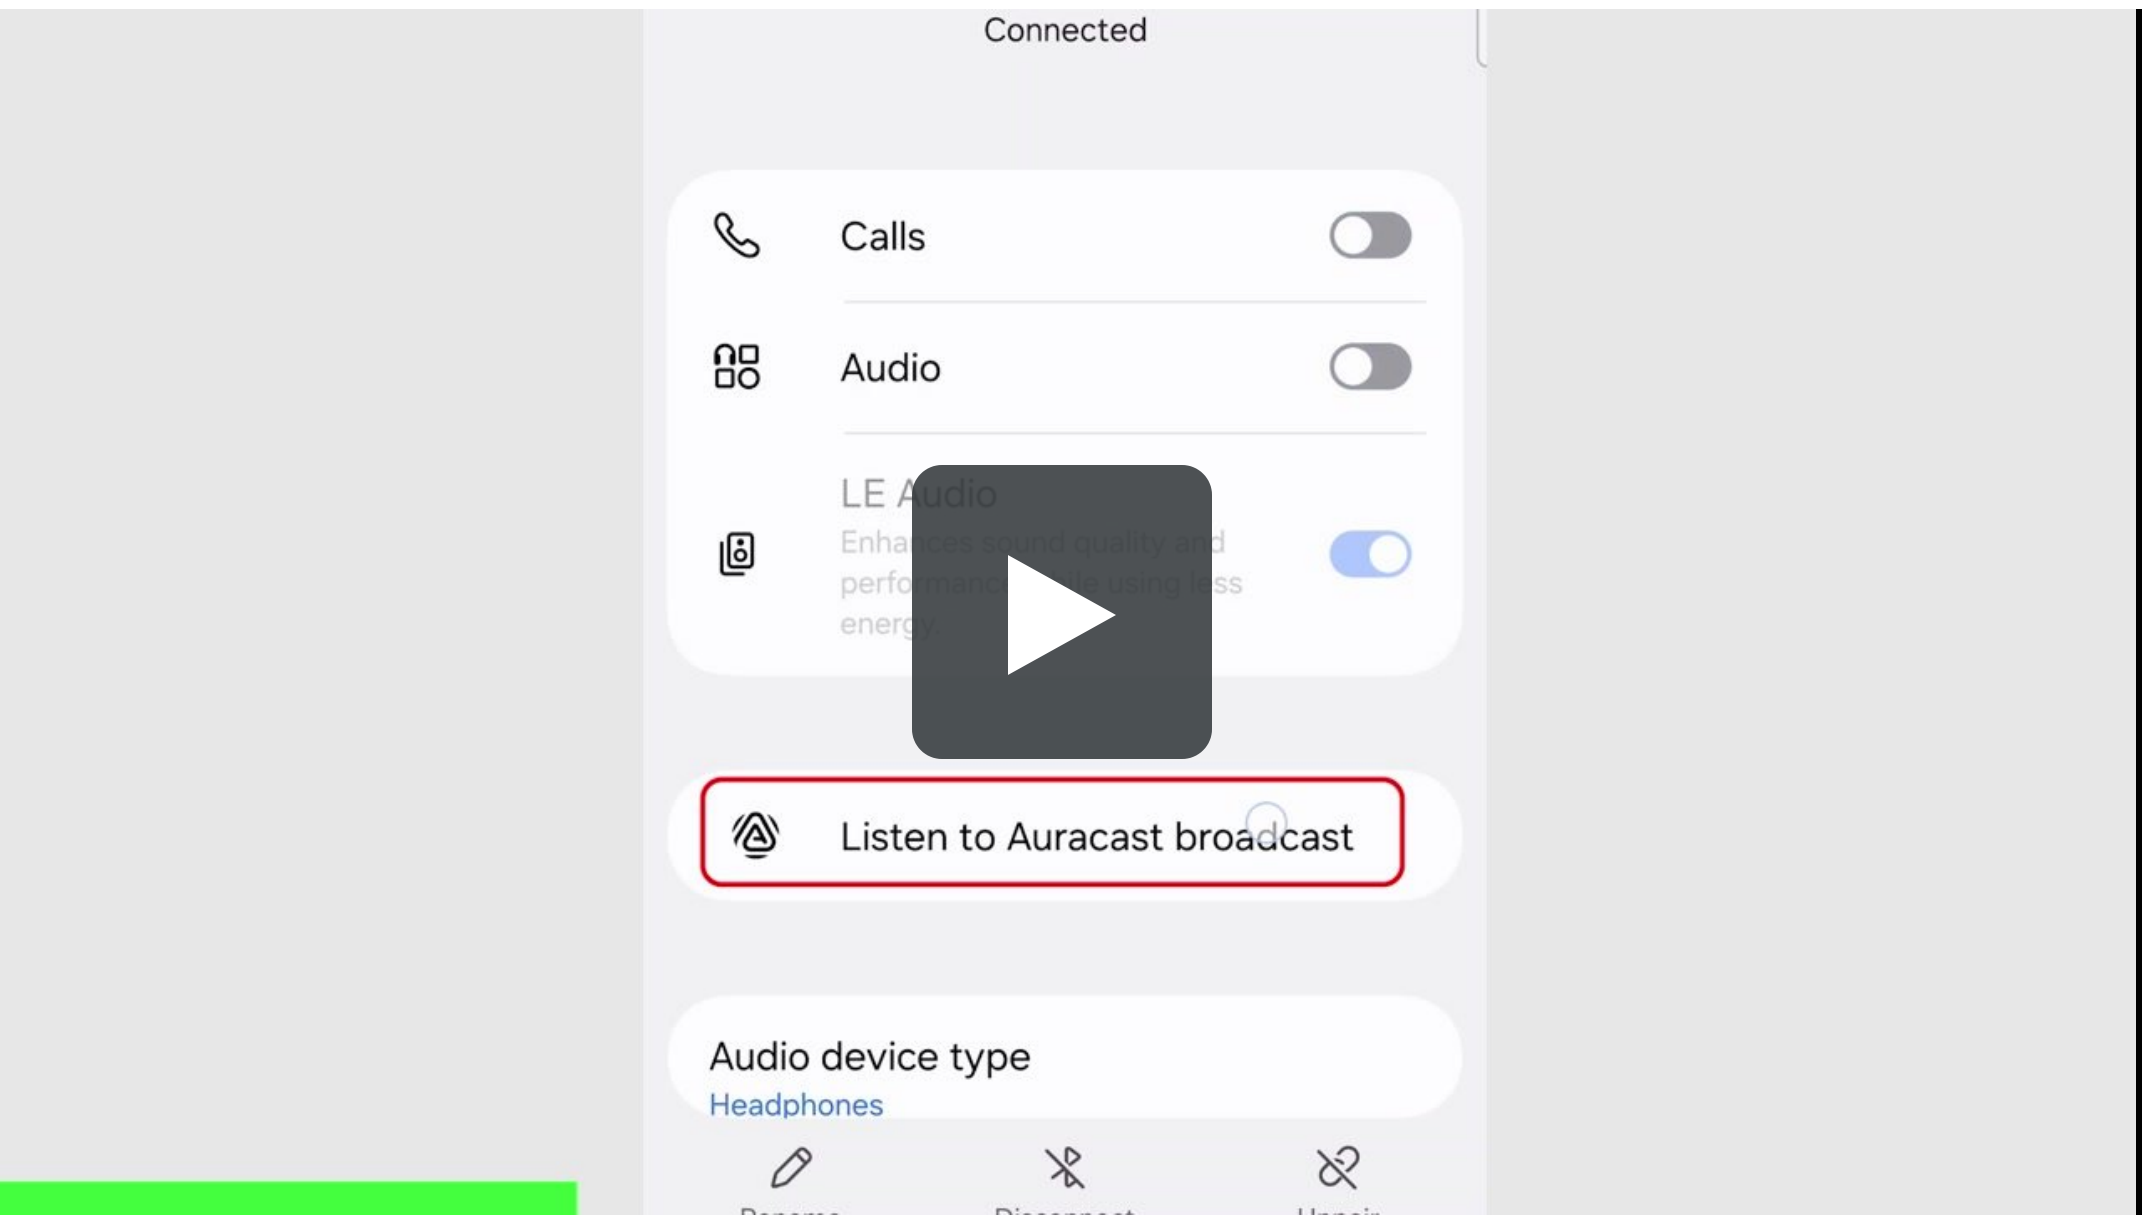

Next

< Back

Menu

B.2 Plug in Speaker

❶ Plug AuraLink into your speaker.

❷ Play audio.

❸ **Adjust volume** through:

- Audio source (TV / phone / PC)
- Transmitter (e.g. Audikast 4)
- The speaker’s own volume control

👉 Join an Open Broadcast ↗

Next

< Back

Menu

4. Bluetooth Mode

- **Universal Compatibility**
  Works with **any Bluetooth device**: phones, tablets, TVs, or computers.

- **Best Latency Performance**
  Use transmitters supporting **aptX Adaptive** for smooth high-quality, and perfectly synced sound.

☞ View compatible aptX Adaptive devices ↗

Next

< Back

Menu

4.1 Pair with Bluetooth Device

❶ Slide power switch to "**ON**"
LED ᛒ blinks **red** & **blue** → Ready to pair.

❷ On your phone or transmitter, select “Avantree AuraLink.”

✅ Connected: LED ᛒ turns **solid**.

⚠️ **If not blinking red & blue,**
press and hold the main button.

Next

< Back

Menu

4.2 Plug in Speaker

❶ Plug AuraLink into your speaker.

❷ Play audio.

❸ **Adjust volume** through:

- Audio source (TV / phone / PC)
- Transmitter (e.g. Audikast 4)
- The speaker’s own volume control

Next

< Back

Menu

5. Firmware Update

Keep Your AuraLink Up To Date

Latest Firmware

V0.3.5 Released: Mar 30, 2026

Synchronizing broadcast password changes from Avantree transmitter

Takes about 1 minute

Update AuraLink

→ View full version history

Get Future Update Alerts

- Compatibility improvements
- New features
- No promotions. Ever.

Notify Me

< Back

Menu

Download & Update

What you need

- A Windows PC or Mac
- Your AuraLink receiver
- The included USB data cable

How to update:

❶ → Download Avantree Updater on your computer.

❷ Use the included USB data cable to connect AuraLink to your computer.



Next

< Back

Menu

Download & Update

❸ Open the Avantree Updater app and click "**Check for Updates**" > "**Install**" next to the latest version.

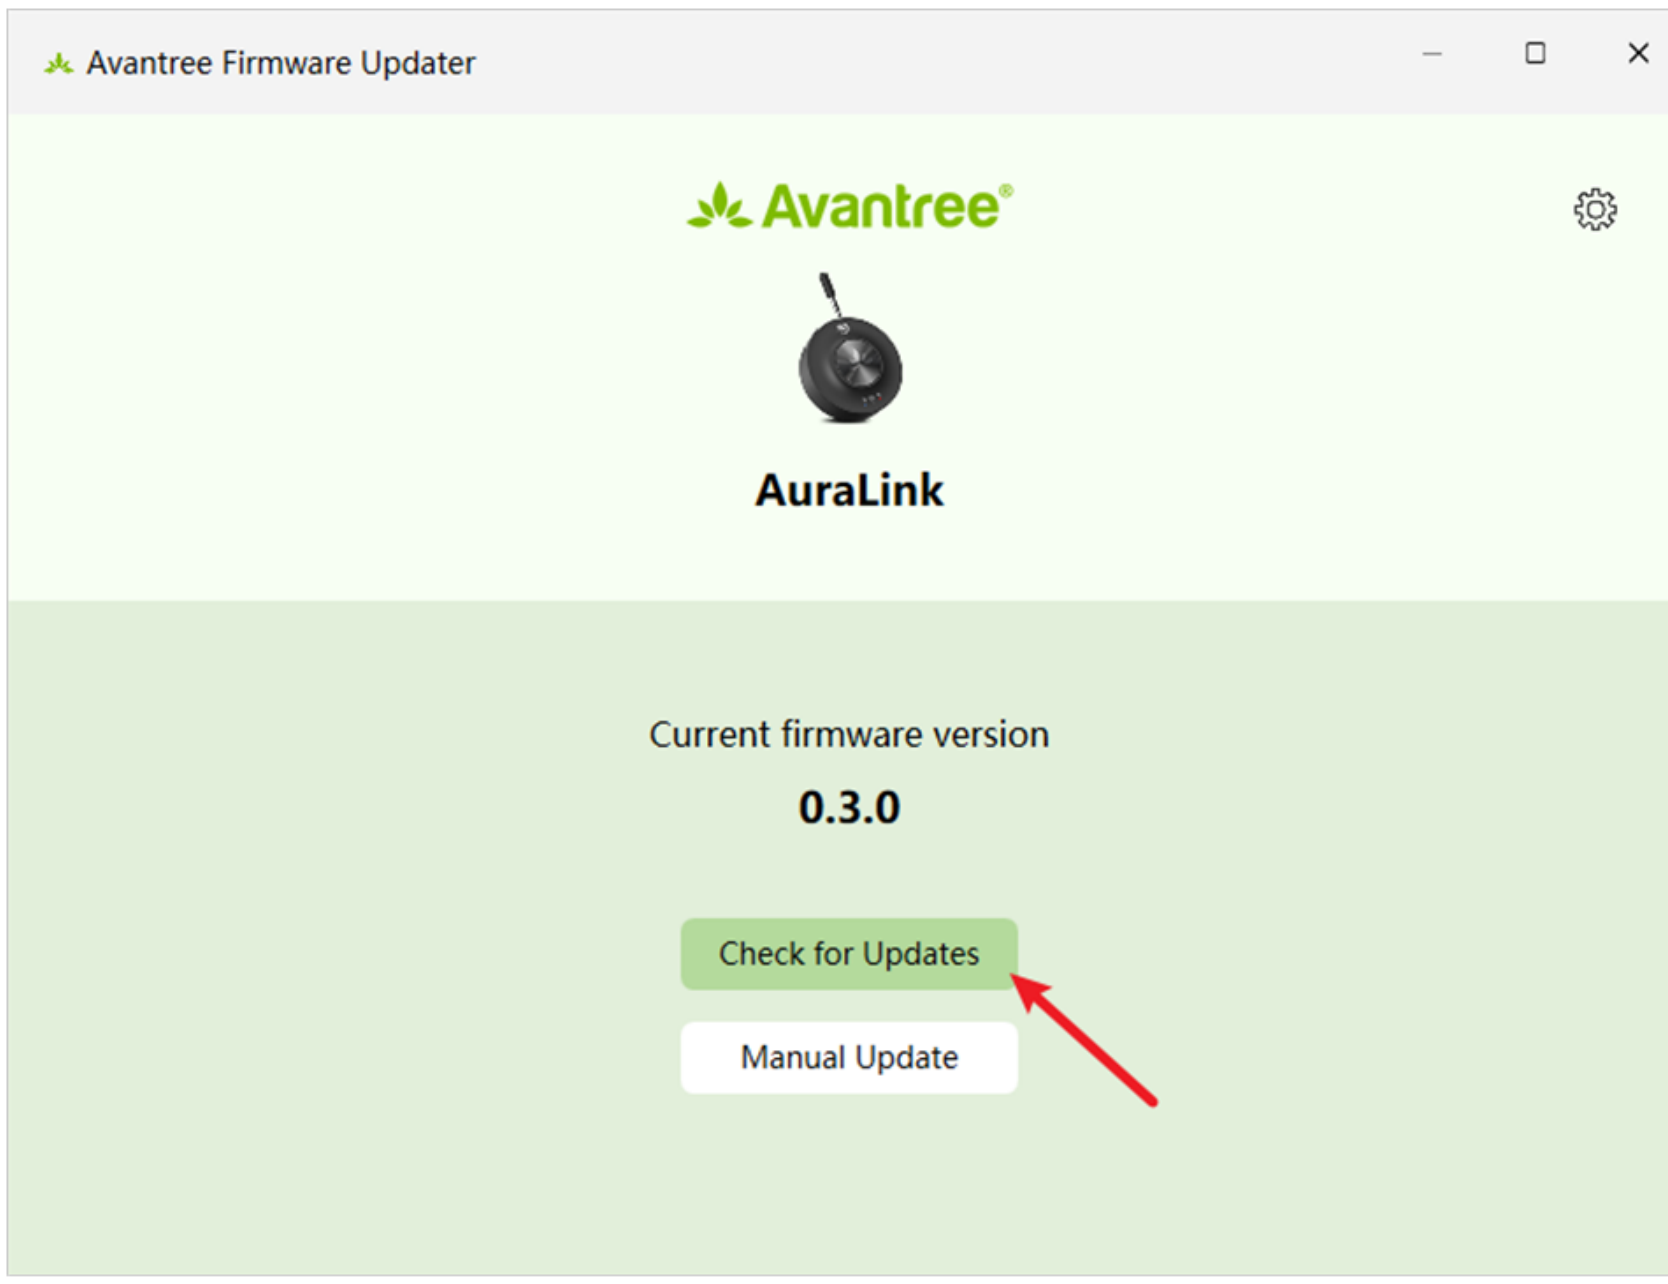

❹ Once the update completes, disconnect AuraLink from your computer.

❺ Reset Auralink , then re-join your broadcast

Next

< Back

Menu

Get Future Update Alerts

- Compatibility improvements
- New features
- No promotions. Ever.

Notify Me

Next

< Back

Menu

6. Troubleshooting

Common Issues

- Can't pair/Connect?↗
- How do I reset /clear pairing history?↗

👉 More FAQ & Help ↗

Still need help? Contact support ↗

Next

< Back

Menu

7. Register & Support

Register Your Product

Extended warranty & get updates.

Get 24M Warranty

Need help? Contact Us

Email

support@venucast.com >

Call

USA (Toll Free)

+1 888 464 0168

Other Regions >

Chat >

Next

< Back

Menu

Did this guide help you?

Your feedback goes directly to our team.

It helps us improve future guides and products.

Takes less than 10 seconds.

Helpful

It's OK

Need Help

Thank you for helping us improve.